

TLC Tips for Faculty

Quick Guide to Using the Epson Interactive Display System

This classroom you are in is home to an Epson projector and interactive whiteboard display. There are three components to this system: hardware, software, and interactivity. This guide is an overview of how all three work in unison and how you interact with the system.


Hardware:

- Turn on the computer that is being used by the system.
- Launch the Epson Interactive Software by clicking on the icon.
- Locate the Epson Control Hub, which is located on the instructor desk and press **PROJECTOR** to display an image.
- Choose the HDMI 1 button on the left hand side of the controller to project the computer image.
- If you are using another source you can select that from the buttons on the hardware as well.



Software:

- Double click on the Epson Interactivity Software Icon on the computer desktop to launch the software.
- Look for two tool bars. One will be on the top. The other will be on either the right or left hand side of the screen.
- If you don't see the sidebar software, click on the small white expandable square with a black triangle inside of it to open the software on the computer and projection screen.

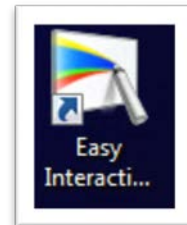

Interactive Pens:

- Locate the Epson Smart Pen and depress the button until you see a green light come on.
- Once the light is lit, the pen will be synced to both the projector and the software.
- Select either **ANNOTATION** or **PC INTERACTIVE MODE** from the sidebar software.
- The pens will cast a small white dot on the screen which will act as the target interactivity area.
- Use the pen to annotate, highlight, draw and control the computer by selecting the proper software mode.



For training and demonstrations on how to use the Interactive Classroom please contact the Teaching and Learning Center at 732-224-2089